



Engine Ferrules & Seals

Engine Ferrules and Seals provide an ideal sealing of fluid passages between a cylinder head and an engine block. Ferrule Seal assemblies provide resistance to fluid leakage while accommodating movement between the cylinder head and the engine block during operation.

Engine Ferrules & Seals

Engine	Ferrule Part No.	Seal Part No.
3054	0328193	N/A
3054	1013984	N/A
3054	1293493	N/A
3204	7N4637	7N4636
3054, 3054B	0676999	N/A
3054, 3056	0328047	N/A
3306DI, G342, D342	7N8851	6L7814
3412/C, 3408/C, 3208	7S4433	N/A
3412C, C32, C27, 3406C, 3456	N/A	3E6772
3516/B, 3508B, 3512/B/C, 3516/B	N/A	2045427
3516/B, 3508B, 3512/B/C, G3520C	N/A	3251412
D343	9S5746	9S5747
D343, D337	3H5912	3H-5887
D348, 336	2S0735	6L7813
G3516, 3508B, 3512C/B, 3516	N/A	3251410
G398 & G399, D398B, D399	6B6224	6L7813
G398 & G399, D398B, D399	7B2420	6L7814
3304, 3306	N/A	7N8018, 9Y1798
D353, G353	N/A	7N6244

* Other part no. not included in the list are available. Please contact your sales representative if you have any questions. Part Numbers are used for reference purposes only