



GAS SPRINGS

Gas springs are used in a variety of applications in machines, heavy equipment, and trucks. They aide in lifting, opening and closing of heavy doors, hatches, windows and hoods. CTP Gas Springs are maintenance-free, provide low friction and high reliability for many years of continuous use. CTP gas springs come assembled with ball socket end fittings ready-to-install. Ball socket ends rotate for easy alignment during installation. We offer a wide variety of direct-fit gas springs for many applications.

Part No.	Use	Machine Model
1137329	ENCLOSURE GP-STORAGE	M312, M316C, M318, M320
1148861	HOOD GP ENGINE	416D, 442D, 428D, 420D, 436C
1151624	GUARD GP-OVERHEAD/ GUARD GP-FRONT WINDOW	320, 320L, 320N, 322, 325, 325C, 325B, 325L, 325LN, 330L, 345B II, 350, 375, 375A, 375L
1166325	ENCLOSURE GP-ENG/GUARD GP-FAN/DOOR GP/ SUPPORT GP	M315, M315C, M316C, M318, M318C, M318D, M322C, M322D,
1166326	ENCLOSURE GP-STORAGE/ WALKWAY GP/ ENCLOSURE GP-ENG	M315, M315C, M316C, M318, M318C, M318D, M322C, M322D,
1219748	WINDOW GP - CAB	428C, 416C, 436C, 426C
1225762	CABIN GP	M318, M315, M312, M320
1429287	ARMREST GP	216, 216B, 216B3, 226B, 226B3, 228, 232B, 236, 236B, 236B3, 242B, 242B3, 247, 247B, 247B3, 248, 252B, 252B3, 257B, 257B3, 259B3, 267, 267B, 268B, 287
1439434	HOOD & GUARD GP	924G, 924GZ, 988F II
1439435	HOOD & GUARD GP	988F
1458867	COLUMN GP-ADJ/GAS SPRING AS/COLUMN AS-STEER	385B, 824G, 825G, 826G, 950G, 962G, 962G II, 966G, 972G, 972H, 980G, 988H,
1532682	SPRING GP-CAB / KIT - CAB DOOR / HANDLE GP- ASSIST	216, 216B, 226, 226B, 228, 232,232B, 236, 242, 242B, 246, 246C, 247, 248, 252, 256C, 257, 262, 267, 267B,268B, 272D, 277, 277B, 277C, 277C2, 279C, 279C2, 287, 289C, 297C, 299C, 299D,
1572193	WINDOW GP- CAB	301.5 302.5 303.5 304.5
1532682	DOOR GP-CAB	216, 226, 228, 232, 236, 242, 246, 247, 248, 252, 257, 262, 267, 277, 287
1594269	DOOR GP-CAB	420E, 450E, 416E, 428E, 428F

* Other part no. not included in the list are available. Please contact your sales representative if you have any questions. Part Numbers are used for reference purposes only.

CTP Gas Springs - Continue:

Part No.	Use	Machine Model
1606154	HOOD & GUARD GP	914G, IT14G, IT14G2, R1300GII, R1600G, R1600H, R1700 II R1700G
1641328	WINDOW GP - CAB	414E, 416D, 416E, 416F, 420D, 420E, 420F, 422E, 424D, 428D, 428E, 430D, 430E, 430F, 432D, 432E, 434E, 438D, 442D, 442E, 444E, 446D, 450E, 450F
1674179	WINDOW GP - CAB	312C, 312D, 315C, 315D L, 318C, 319C, 319D, 320C, 322C, 323D L, 323D LN, 324D, 324D L, 324D LN, 325C, 325D, 325D L, 329D L, 330C, 330C L, 330D, 330D L, 330D LN, 330D MH, 336D L, 336D LN, 345C, 345C L
2035470	CANOPY GP	AP-600D, AP-655D, CP-433E, CP-44, CP-533E, CS-423E, CS-433E, CS-44, CS-533E, CS-54
2102516	DOOR GP-HOOD	IT28G, 928G
2102518	DOOR GP-HOOD	IT28G, 928G
2102519	DOOR GP-SIDE	928G, IT28G,
2287696	HOOD & GUARD GP	928 USAF10K ATFL, 924H & 924Hz, 924G & 924Gz, 930G
2303214	DOOR GP-CAB	216, 216B, 216B3, 226B, 226B3, 228, 232B, 236, 236B, 236B3, 242B, 242B3, 247, 247B, 247B3, 248, 252B, 252B3, 257B, 257B3, 259B3, 267, 267B, 268B, 287
2535343	ENCLOSURE GP-ENG	CP-573E, CP-663E, CS-563E, CS-583E, CS-663E, CS-683E
3199510	STEERING COLUMN GP	IT28G, 938, 938H, 914G, 924H
3199512	STEERING COLUMN GP	416D, 420D, 424D, 428D, 430D, 432D, 438D, 442D, 446D, CB-434D, CB-534D, CB-564D, CW-34
3381508	COLUMN AS-STEERING	414E, 416E, 416F, 420E, 420F, 422E, 422F, 428E, 428F, 430E, 430F, 432E, 432F, 434E, 434F, 442E, 444E, 444F, 450E, 450F
8T7041	CABIN GP	R2900G, R1600G, R1700G, R3000H, 446B, 924F



* Other part no. not included in the list are available. Please contact your sales representative if you have any questions.
Part Numbers are used for reference purposes only.