



DIAPHRAGMS

Heavy-duty equipment diaphragms are crucial seals, specially in fuel and hydraulic systems, regulating fluid flow and pressure in construction, mining, and agricultural machinery. Regular maintenance is essential to prevent leaks, maintain efficiency, and extend equipment life. Neglecting diaphragm care can lead to performance issues, downtime, and safety hazards, highlighting the importance of proper attention to these critical components.

Part No.	Description	Application
1125360	ACTUATOR GP-AIR	3406, 3406B, 3406C, 3408, 3408C, 3412, 3412C, 3412D
1131572	BYPASS GP-EXHAUST	3508C, 3512B, 3512C, 3516B, 3516C, 3616, 793B, 793C, 793D, C280-8, CG137-08, CG137-12, G3306, G3406, G3408, G3408B, G3408C, G3412, G3412C, G3508, G3508B, G3512, G3512B, G3516, G3516B, G3520B, PMG3516
1716696	CONTROL GP-FUEL RATIO	245, 3406, 3408, 3408B, 3408C, 3412, 3412C, 3412D, 589, 594H, 621, 631E, 637D, 637E, 651E, 657E, 769C, 771C, 773B, 775B, 777, 834B, 988B, 988F, 990, 992C, 992D, D10N, D9R
1W4797	CONTROL GP-FUEL RATIO	245, 3406, 3408, 3408B, 3408C, 3412, 3412C, 3412D, 589, 594H, 621, 631E, 637D, 637E, 651E, 657E, 769C, 771C, 773B, 775B, 777, 834B, 988B, 988F, 990, 992C, 992D, D10N, D9R
2W0121	GOVERNOR GP	3508, 3512, 3516, 785
4D2292	VALVE GP-AIR CONTROL	613C, 621E, 631C, 631E, 641B, 657, 769C, 769D, 771C, 771D, 772, 773B, 773D, 775B, 775D, 776C, 776D, 777, 777D, 784B, 785B, 789B, 793B, 793C, 920, 926, 930, 936F, 950, 950F, 950F II, 966C, 966D, 966F
4S7458	CONTROL GP-FUEL RATIO	140G, 1673, 1673C, 1676, 3208, 3304, 3306, 621, 621R, 627, 627B, 633C, 637D, 641B, 950, 955K, 966C, D320A, D330B, D333B, D348, D398, D4E, D6C, D7F, D8K, D9G, PR-1000
5D0863	VALVE GP-QUICK RELEASE	16H, 637, 641, 641B, 651, 657, 950, 950B, 966C, 980, 980B, 980C, 980F, D399, G399, RM-250C, RR-250B
5K5941	BRAKE CHAMBER ASSEMBLY	814, 966C, 966R
5K7405	CYLINDER GP-AIR OVER HYD	518, 528, 528B, 530B, 613B, 920, 930
5N2487	SHUTOFF GP-MECHANICAL	3304, 3306
5V1246	RESERVOIR GP	518, 528, 528B, 530B, 613C, 613C II, 814B, 815B, 816B, 910, 916, 920, 926, 930, 936, 950, 950B, 950B/950E, 966D, D250B, D25C, D25D, D300B, D30C, D350C, D400, D40D, FB518, G936, IT18B, IT28B
5V6125	ROTOCHAMBER AS	980C
6I1564	CONTROL GP-FUEL RATIO	120H, 120H ES, 120H NA, 12G, 12H, 12H ES, 12H NA, 135H, 135H NA, 140G, 140H, 140H ES, 140H NA, 143H, 14G, 14H NA, 160H, 160H ES, 160H NA, 163H NA, 16G, 16H NA, 235B, 3114, 3116, 3126, 320 L, 320B
6K1807	ACTUATOR GP-BRAKE	621, 621B, 621E, 621F, 621G, 623E, 623F, 623G, 627E, 627F, 627G, 980, 980B
7V5306	TANK GP-HYDRAULIC	824C, 826C, 980C, 980F
8F7278	ROTOCHAMBER	630B, 631C, 631D, 633C, 633D, 637D, 651, 657, 657B, 666, 769, 772, 773B, D35C, D35HP, D44B, D550B
8F7331	ROTOCHAMBER	621, 621B, 627
8J9393	ROTOCHAMBER GP	777
9C5790	TANK GP-HYDRAULIC	518C, 824C, 826C, 936F, 950F, 950F II, 966F, 970F, 980C, 980F, D35C, D35HP
9G0041	BRAKESAVER CONTROL VALVE GROUP	3408, 621E, 621F, 623E, 623F, 627E, 627F, 631C, 631E, 633E II, 637D, 637E, 639D, 651E, 657E, D250B, D250E, D25C, D25D, D300E, D30C, D350C, D350E, D35C, D400E, D40D
9L7873	KIT-MAINTENANCE	3208, 613C, 931B, FB221, PR-1000, PS-500

* Other part no. not included in the list are available. Please contact your sales representative if you have any questions. Part Numbers are used for reference purposes only. Komatsu® is the registered trademark of Komatsu Ltd.